



LTPRSM pattern positioning instructions

By default, LTPRSM pattern projector units are provided without any projection pattern inside. A PTPR series projection pattern can be easily mounted inside the unit by the user following these instructions.


! Make sure to perform this procedure in a clean, non-dusty environment in order to prevent dust or other particles from entering the lens.

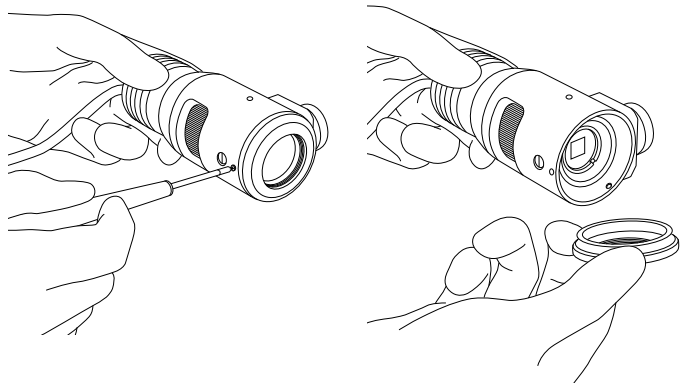


1 Loosen the socket head set-screws by means of an M1.5 Allen key and remove the C-mount adaptor

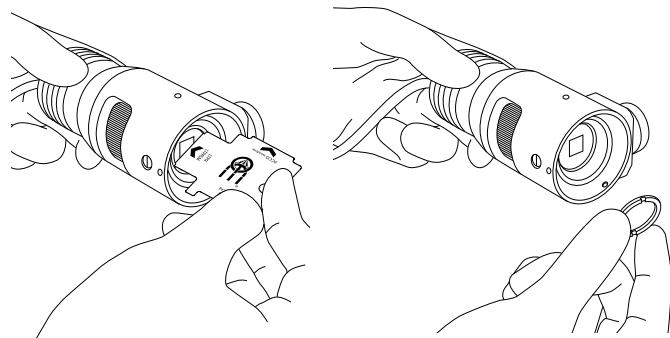

2 Remove the retaining ring using the provided PTTOOL instrument.

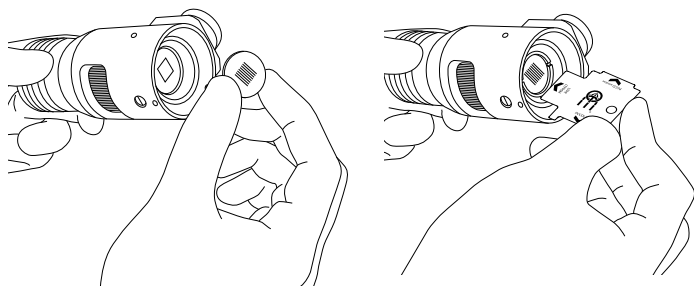


3 Fix the projection pattern in place by screwing the retaining ring with the provided PTTOOL.

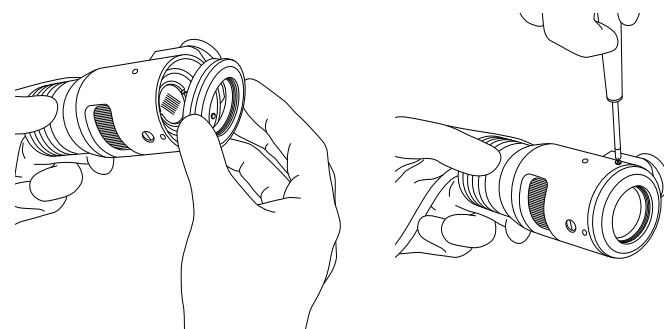


4 Insert back in place the C-mount adaptor and fix it by tightening the socket head set-screws with an M1.5 Allen key


Projection pattern orientation

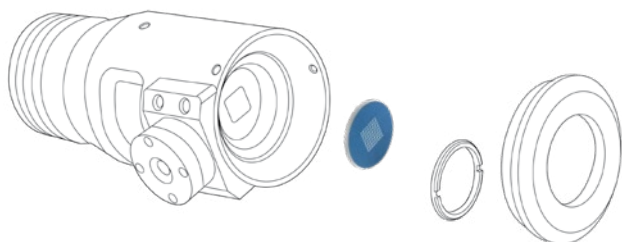

Uncoated surface towards light source

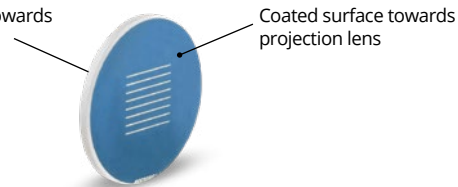

Coated surface towards projection lens

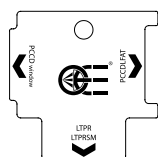

Use the provided PTTOOL instrument to remove/insert each component (the correct side is correspondingly labeled).



OPTO ENGINEERING

LTPRSM pattern positioning instructions

V 3.0

OPTO-E.COM